

快速安装指南
SR3000-lite


1 包装清单

请检查您购买的产品是否包含以下组成件,若缺少请与您的经销商联系。




2 产品结构

指示灯状态	工作状态
红色常亮	上电/Mesh未连接
绿色闪烁	Mesh连接中
绿色常亮	Mesh连接成功
熄灭	断电

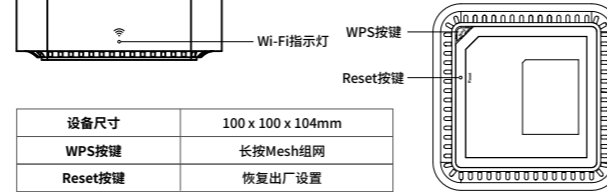

设备尺寸	100 x 100 x 104mm
WPS按键	长按Mesh组网
Reset按键	恢复出厂设置

3 接口说明

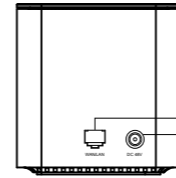

序号	接口描述
1	WAN/LAN接口
2	DC电源接口

4 设备开机

- 第一步 将电源适配器插入设备的DC电源插孔,连接无误后通电并启动该设备。
- 第二步 通过LAN口连接PC,将PC设为动态获取IP地址模式,即可从设备获取一个192.168.1.X地址。
(默认IP地址为:192.168.1.1)
- 第三步 打开浏览器,在地址栏输入http://192.168.1.1,即可登录该设备的配置界面。
(默认管理员账号:admin 密码: admin)

需要授权

请输入用户名和密码。

用户名

密码

5 基本配置

网络连接模式

请确定您的网络接入模式属于哪一种,并记录相关参数。通常网络接入方式有三种:DHCP,静态IP,PPPoE。
DHCP:设备默认通过DHCP服务器获取网络配置。例如:IP地址、子网掩码、网关和DNS服务器。
静态IP:若设备无法通过DHCP服务器获取网络配置,则需要手动IP地址、子网掩码、网关、首选DNS服务器和备选DNS服务器。
PPPoE:若设备使用ADSL调制解调器,则通过PPPoE方式连接到网络。有关用户名及密码的具体信息,请咨询网络技术服务提供商。


飞音时代产品保修条例

尊敬的客户:

感谢您选购深圳飞音时代网络通讯技术有限公司的产品。自您购买产品之日起,凡按照使用说明书安装使用,一年内本公司免费维修,一年后维修只收取维修工本费。非本公司产品质量原因引起的维修,如使用不当,保管不妥,擅自拆机等原因造成的损坏,将收取维修工本费。
 注:申请产品维修时,请把此保修卡和所购产品一起妥善送(寄)回售后服务部维修。

保修卡


产品型号		标签	
客户名称		购买日期	
客户地址			
联系人		电话	
经销单位			
联系人		电话	
销售日期			

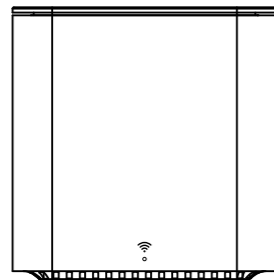

Quick Installation Guide
SR3000-lite


1 Packing list

The following items are included in your package. Please contact your service provider, if you find anything missing.

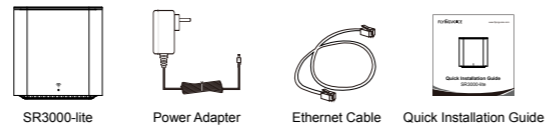


2 Physical specification

Indicator Status	Working Status
Steady (Red)	Power on/ Mesh unconnected
Flashing (Green)	Mesh connecting
Steady (Green)	Mesh connected
Off	Power off

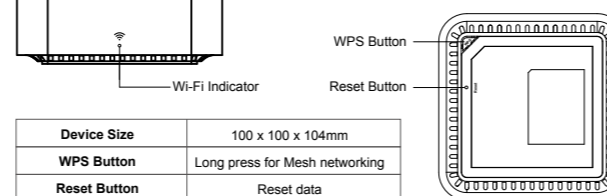

Device Size	100 x 100 x 104mm
WPS Button	Long press for Mesh networking
Reset Button	Reset data

3 Interface Description

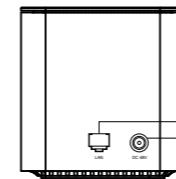

No.	Port Description
1	WAN/LAN Port
2	DC Power Port

4 Device Start

1. Connect one end of the power cord to the power port of the device. Connect the other end to the wall outlet.
2. Connect the PC through the LAN port and set the PC to DHCP mode to obtain a 192.168.1.X address from the device. (Default IP address is: 192.168.1.1)
3. Open your web browser and enter http://192.168.1.1 in the address blank to log in to the configuration page of this device.
(Default Administrator account: admin Password: admin)

Authorization Require

Please enter your username and password.

Username

Password

5 Basic Configuration

Network Connection Mode

Confirm your network access mode and record relevant information. Generally, there are three ways of network access: DHCP, Static IP, and PPPoE.
DHCP: The device obtains the network configuration through the DHCP server by default.
Static IP: If the device cannot obtain network configuration through the DHCP server, manual IP address, subnet mask, gateway, and preferred DNS server are required and alternate DNS servers.
PPPoE: If the device uses an ADSL modem, it is connected to the network through PPPoE. For specific information about usernames and passwords, please consult your network technology service provider.

Flyingvoice Product Warranty Regulations

Dear Customer:

Thank you for purchasing the products of Shenzhen Flyingvoice Network Technology Co., Ltd. Since the date of purchase, where the installation and use in accordance with the quick installation guide, our company will provide free maintenance within one year, after one year maintenance only charge the maintenance fee. Maintenance for non-product quality issues, such as improper use, improper storage, unauthorized disassembly and other issues for damage, will be charged for maintenance fee.
Note: When applying for product maintenance, please send this warranty card and the purchased product back to the customer service department properly for maintenance.

Warrenty Card

Model		Tag	
Customer Name		Data of Purchase	
Customer Address			
Contact Person		Tel.	
Distribution Units			
Contact Person		Tel.	
Data of Sale			